




RENAULT

ZOE

All types

(2013 - )

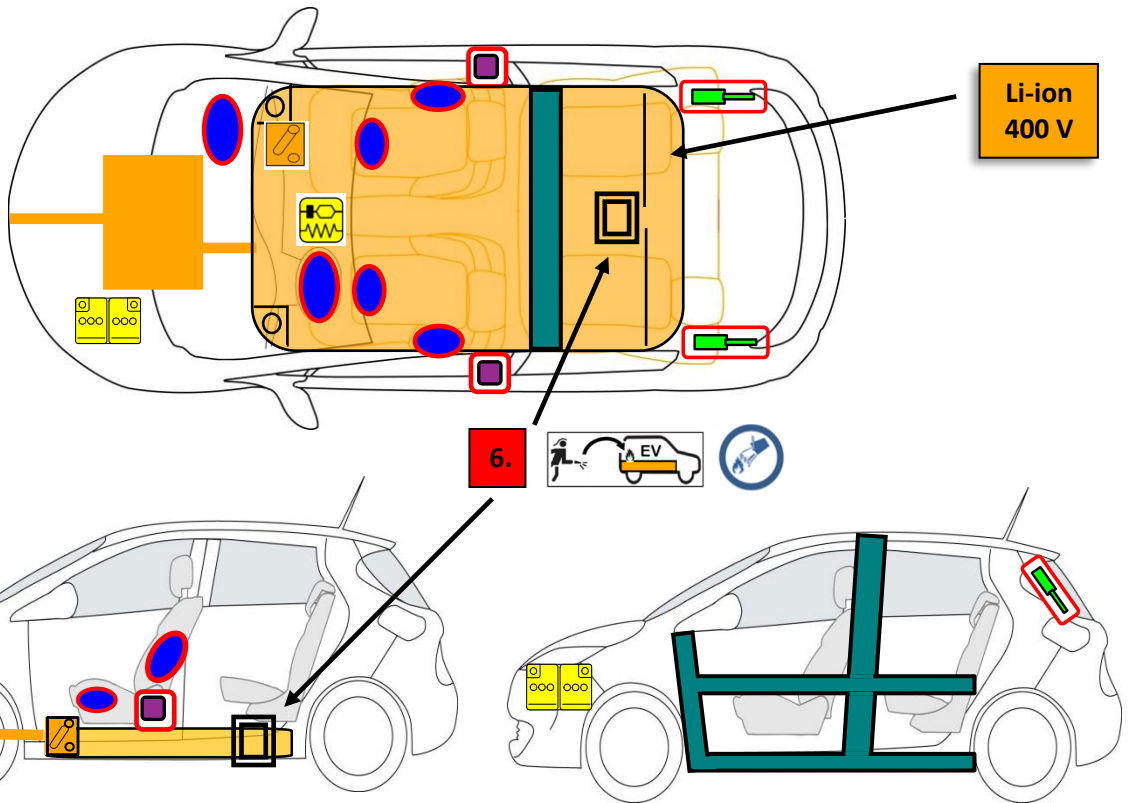

|  |                                      |  |                              |  |   |  |                                  |  |                                     |
|--|--------------------------------------|--|------------------------------|--|---|--|----------------------------------|--|-------------------------------------|
|  | Airbag                               |  | Stored gas inflator          |  | Seat belt pretensioner                            |  | SRS control unit                 |  | Pedestrian protection active system |
|  | Automatic rollover protection system |  | Gas strut / Preloaded spring |  | High strength zone                                |  | Zone requiring special attention |  |                                     |
|  | Battery low voltage                  |  | Ultra-capacitor, low-voltage |  | Fuel tank   |  | Gas tank                         |  | Safety valve                        |
|  | Battery pack, high-voltage           |  | High voltage power cable     |  | High voltage device that disconnects high voltage |  | Fuse box disabling high voltage  |  | High voltage ultra-capacitor        |

In consultation with



MINISTÈRE DE L'INTÉRIEUR

Internal reference

Version date

Version

Page

RS-B10-2013-3

17/05/2021


3

1 / 4

## 1. Identification / recognition





## 2. Immobilisation / stabilisation / lifting

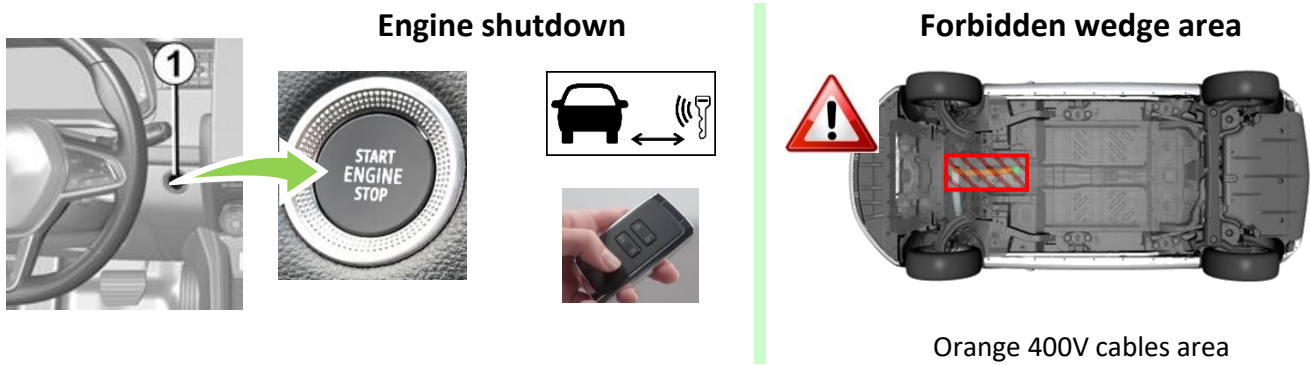

## 3. Disable direct hazards / safety regulations


### 12 Volts Battery

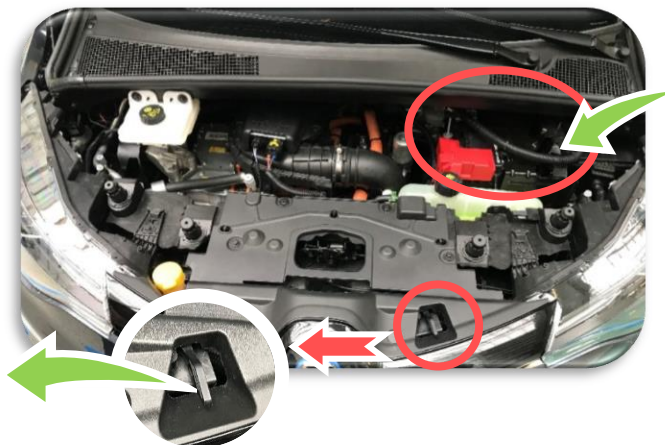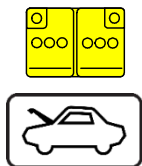

1 - Engine shutdown


2 - Disconnect the negative terminal (-)

## 400 Volts battery

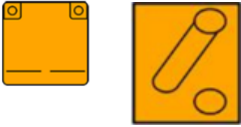

**Only if cutting operation is necessary :**

Disconnection of the 400 Volts battery by removing the service plug.

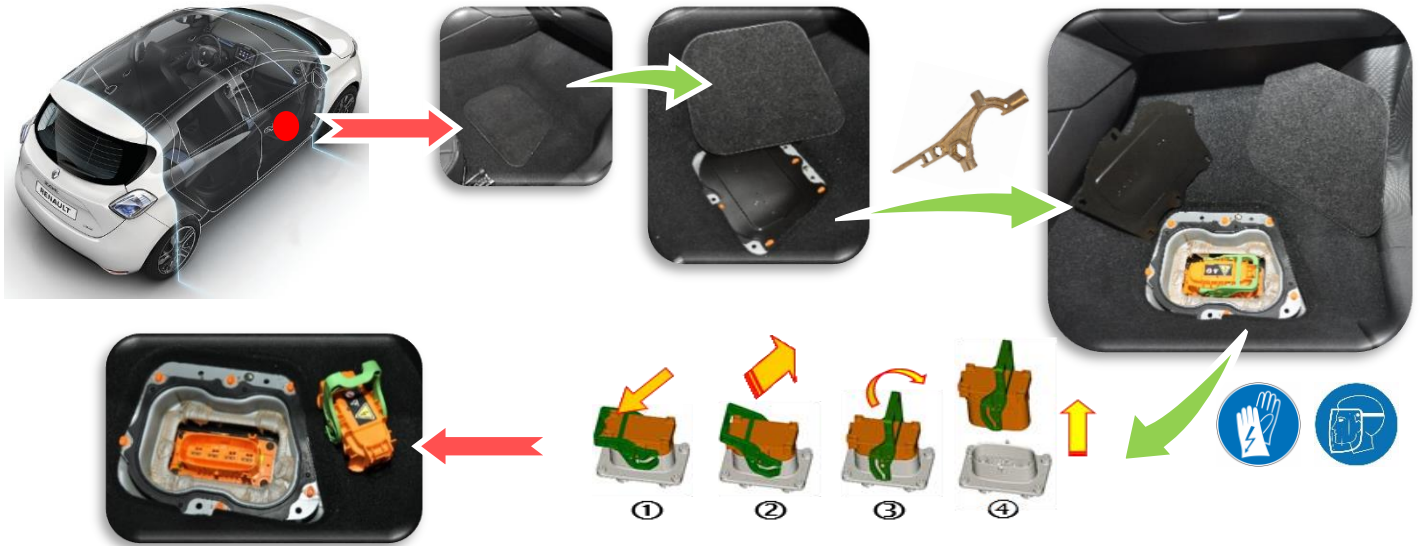

## 5. Stored energy / liquids / gases / solids

|  |             |       |                       |         |
|--|-------------|-------|-----------------------|---------|
|  | Lithium-ion | 400 V | <i>ZE 50 Electric</i> | 52 kW.h |
|  |             |       | <i>ZE 40 Electric</i> | 41 kW.h |
|  |             |       | <i>ZE</i>             | 22 kW.h |

## 6. In case of fire

### Extinguishing a traction battery fire propagation



If traction battery on fire : → Water extinguishing by filling

## Tailgate gas struts



 
Risk of missile effect of tailgate gas struts

## 7. In case of submersion



No electrical hazard

## 8. Towing / transportation / storage



## 10. Explanation of pictograms used

|                                  |                 |                              |                                      |                           |                   |
|----------------------------------|-----------------|------------------------------|--------------------------------------|---------------------------|-------------------|
|                                  |                 | Electric Vehicle             |                                      |                           | Remove smart key  |
|                                  |                 | Use thermal Infrared camera  |                                      |                           | Bonnet            |
|                                  |                 | Special battery access       |                                      |                           | Dangerous voltage |
| Electrical protection gloves<br> | Face shield<br> | Breathing apparatus (BA)<br> | Use water to extinguish the fire<br> | Don't brake, nor open<br> |                   |